


# RO Maple Expansion Kit

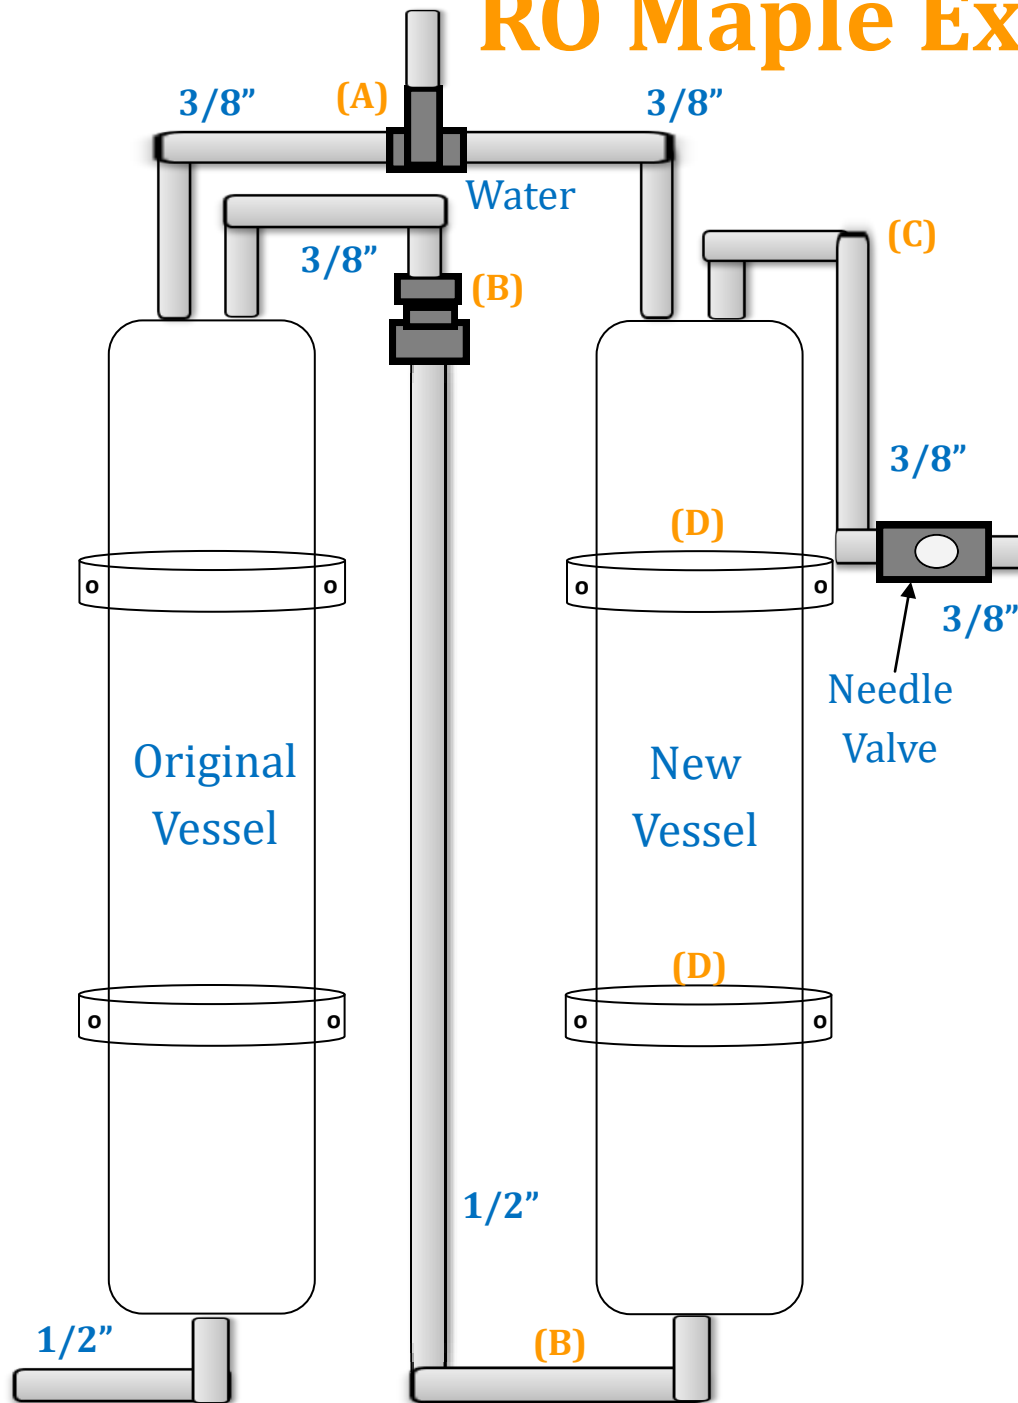

## Instructions

- \* Connect part (A) together.
- \* Remove the existing part (C), and connect it to the new vessel.
- \* Connect part (B) to the existing vessel, to feed into the bottom of the new vessel.
- \* If the cart does not have pre-drilled holes, drill holes into the frame of the cart for the part (D).
- \* Attach the 2 screws to part (E).
- \*\*\* **Note** : the back of it is labeled.

## Parts

- Part (A)** 3/8" Tee Water Lines
- Part (B)** 3/8 x 1/2" Union with Tubing
- Part (C)** 3/8" Tubing to Needle Valve
- Part (D)** S/S Mounting Straps with Rubber Mounts
- Part (E)** Sap Guard